

Blu-ray™ Disc Player

User Manual



All information provided on this manual may change for user convenience without prior notice.





Search




(May not be available, depending on your country.)

Easily search for and access content from diverse sources (e.g. applications, Your Video, AllShare)

1. To open **Search**, press the buttons ▲/▼/◀/▶ to select **Search**, and then press the **ENTER**  button.
2. If you want to input a search term directly, press the **ENTER**  button. A keypad screen appears. Enter the search term using the remote control.



NOTE

- If you want to select a category, press the ▼ button. Use ◀/▶ the buttons to select a category, and then press **ENTER** .
- **Your Video** : Personalize your movie-watching with a customized video on demand (VOD) recommendation service.
- **Most Searched** : You can search for a video or other content by selecting a word in the key word list. The key word list displays words and terms you frequently use for searches.
- **Top Application** : You can select top applications and Internet services from a list.
- **Search History** : You can search for a video or other content by selecting a word in the Search History list. The Search History list contains words and terms from your previous searches.

Your Video



(May not be available, depending on your country.)

1. To open **Your Video**, press the ▲/▼/◀/▶ buttons to select **Your Video**, and then press the **ENTER**  button.
2. Use the ◀/▶ buttons to select Recommended, New Releases, Top 20 Movies, Top 20 TV Shows, and recommendations by Friends. Then, use the ▼/◀/▶ buttons to highlight and the **ENTER**  button to select. You can also search by name or genre.