



MOTOROLA

US EN

DECT 6.0 Cordless Phones

L301 / L302 / L303 /
L304 / L305

DECT 6.0 Cordless Phones with Answering System

L401 / L402 / L403 /
L404 / L405

Quick Start Guide

- 1** Getting started
- 2** Using the phone
- 3** Help
- 4** General Information

 
This quick start guide provides all the information you need to get you started. If you need more detailed instructions, a full user's guide is available to download in PDF format from www.motorola.com.

Please consider the environment before printing.

Box Contents




L30x series / L40x series
handset

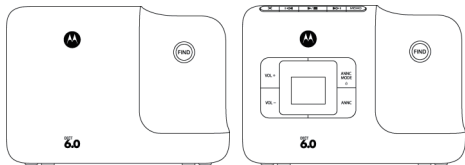

L30x series / L40x series base



 Battery door



NiMH rechargeable
battery pack



Power adapter



Telephone line
cord



User's guide



Quick start guide

In multihandset packs, you will find one or more additional handsets, chargers with power adapter units, additional rechargeable battery packs and battery doors.

 
IMPORTANT

Only use the telephone line cord supplied.

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

1 Getting started

Step 1. Connect the base

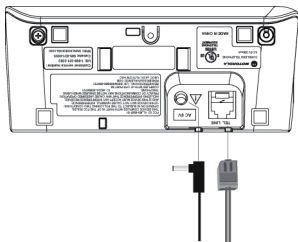

- Plug the power adapter with smaller pin plug & telephone line cord into the base. Power adapter with bigger pin plug is for charger (for multi-pack only).
- Plug the other end of the power adapter & telephone line cord into the wall jack.

 
TIPS


Do not place your phone in the bathroom or other humid areas. Please refer to the user's guide for more cautions when you choose the location of your phone.

IMPORTANT

Only use the power adapter and telephone line cord supplied with the product.

Step 2. Install and charge the handset battery pack

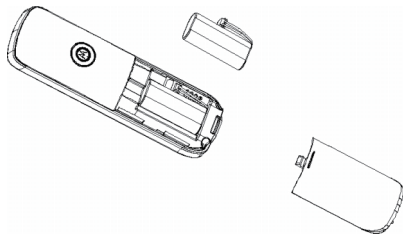








- Slide out the battery compartment cover. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
- Slide the battery compartment cover back.
- Put the handset on the base to charge for at least 24 hours. When the handset is fully charged the  will indicate that it is fully charged.



IMPORTANT

Use only the rechargeable battery pack provided.

Step 3. Set the display language




- Press  and  to select **SETUP HS**.
- Press  and  to select **LANGUAGE**.
- Press  and  to select the language.
- Press  to save.

Step 4. Set date and time

- Press  to select **DATE & TIME**.
- Press  and edit the year and date.

TIPS

You can press  to move between the input fields **YEAR** and **DATE**.

 
- Press  and edit the time in 12hr format. Press  to toggle **AM/PM** settings.
- Press  to save the settings.

NOTE

If you have subscribed to your network's Caller ID service, the date and time is set automatically for all handsets every time a call is received.

Step 5. Your phone is now ready for use.

Handset LCD Display

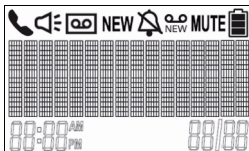

Display icons



On when the line is in use.
Flashes when there is an incoming call.



On when speakerphone is turned on.



On when answering machine is turned on.
Flashes when new answering machine message is received.
(This icon is displayed for L40x series only.)

NEW

Indicates when new call is received.
Off when new call has been viewed.



On when ringer volume is turned off.



On when there is new voice mail not yet listened to.
Off when new voice mail has been listened to.

MUTE

On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when low battery level is detected, needs charging.



Animation in cycle. Battery is charging.




2 Using the phone

US EN


Make a call

Enter the phone number and press  or  to dial the phone number.


Answer a call

When the phone rings and  flashes in the display, press  or press  to answer the call.





End a call

During a call, press  or put the handset on the base cradle.

Adjust volume

During a call, press .








Dial from the redial list

- Press  and then  to the entry you want to redial.
- Press  or  to dial the number.





Dial from the calls list

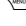- Press  and then  to the entry you want to dial.
- Press  or  to dial the number.







Add entry to phonebook

- Press  and press  to select **ADD**.
- Press  and enter the name.
- Press  and enter the number.
- Press  and  to select a melody.
- Press  to save settings.







Dial from the phonebook

- Press  then scroll  to select the entry you want to dial.
- Press  or  to dial the number.







Set the ringer tone

- Press  and  to select **SETUP HS**.
- Press  to select **RINGER TONE**.
- Press  and  to select a ringer melody.
- Press  to save.

Set the ringer volume

- Press  and  to select **SETUP HS**.
- Press  to select **RINGER VOLUME**.
- Press  and  to increase or decrease the volume level.
- Press  to save.

Change the handset name

- Press  and  to select **SETUP HS**.
- Press  and  to select **HANDSET NAME**.
- Press  and enter your desired handset name.
- Press  to save.

Set the LCD contrast

- Press and to select **SETUP HS.**
- Press and to select **LCD CONTRAST.**
- Press and to adjust the contrast level.
- Press to save.

Set auto talk on/off

- Press and to select **SETUP HS.**
- Press and to select **AUTO TALK.**
- Press and to turn on or off auto talk.
- Press to save.

Reset all settings

- Press and to select **RESET SETTINGS.**
- Press and to select **ALL SETTINGS.**
- Press to select **YES.** Then all the personalized settings will be reset to default.

NOTE

Phonebook entries, calls list and redial list will remain unchanged.

Paging/Find handset

- Press on the base. All handsets registered to the base will ring.
- To stop the paging, press again, or press / / on the handset, or place the handset on the cradle.

For L40x series only

Switch the answering machine on / off

Press at the base to step between answering machine modes. When the base is switched on the display shows **00** (or other number) when in Announce and Record mode, **8n** when in Announce Only mode, and **--** when in Answer Off mode.

Listen to messages

Press the keys below on the base to perform the respective functions:

: Press to stop playing messages or resume playback.

: Press once to replay current message from the beginning. Press twice to playback the previous message.

: Press to play the next message.

: Press to delete the current message.

: Increase the loudspeaker volume by one level (0 to 8).

: Decrease the loudspeaker volume by one level (0 to 8).

NOTE

Ringer will be off when the volume is decreased to level 0.

3 Help

For more solutions, see the full Help section in the user's guide.

The icon is not scrolling when the handset is placed on the base

- Bad battery contact – move the handset slightly
- Dirty contact – clean the battery contact with a cloth moistened with alcohol
- Battery is full – no need to charge

No dial tone

- No base power - check the connections. Reset the phone: unplug and plug back in the electrical outlet.
- Handset batteries are empty - charge the battery pack for at least 24 hours.
- Handset may be too far from the base - move closer to the base.
- Wrong telephone line cord - use the telephone line cord provided.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal doorframes - move the base away from any electrical appliances.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID does not work

- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the battery pack.
- Reset the base. Unplug the unit's electrical power, then plug it back in.
- If LED is not lit up, then try to unplug the unit's electrical power, then plug it back in.

When the handset lost its link with the base during a call

- Check the power cord is connected properly into the base.
- Check the power adapter is connected properly into an electrical outlet.
- Move the handset closer to the base. It may be out of range.
- Reset the base by unplugging the unit's electrical power. Wait for around 15 seconds and plug it back in again. Allow up to one minute for the handset and the base to synchronize.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

Need more help?

- For a full explanation of all features and instructions, please refer to the user's guide.

4 General information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery contact customer service or visit our website.



MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2009. All rights reserved.

Printed in China

Version 2.0